

## *Blu-ray Recorders: When editing or deleting scenes, is there an UNDO function?*

No. Once you select "Execute" to perform your edit or deletion, the results are final. Always keep your original source material (camcorder, memory cards) as a backup, in case you make a mistake.

*Unique solution ID: #1151*

*Author: Dave Walton*

*Last update: 2010-01-21 08:28*