

*GY-HD200/250U: I just opened my GY-HD250 and the HD-SDI connector is not working?*

To turn the HD-SDI on open the camcorder's menu. Go to the second page of the "Video Format 2/2" menu. Turn the "HD/SD-SDI OUT" menu item "ON".

*Unique solution ID: #1006*

*Author: Lenny Stroynick*

*Last update: 2007-05-30 14:08*